


Entering Setup Mode:

Connect the power to the pedal while holding down the TAP/ALT footswitch. Both LEDs will glow purple for 5 seconds. After that, the UI will display the current settings.


Setup Mode: Global Setup Page (Bank switch UP)

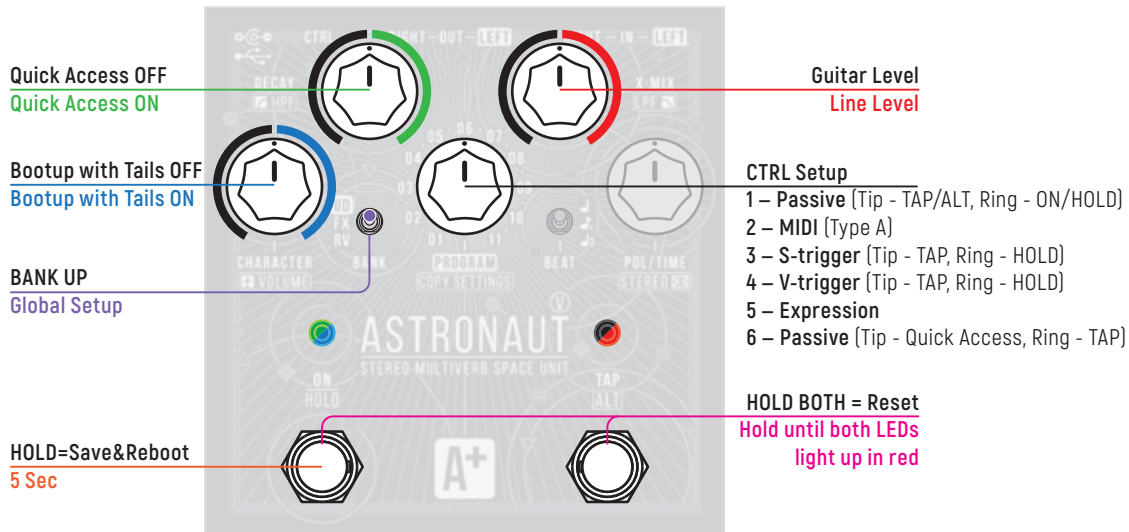

Saving & Exiting Setup Mode:

Press and hold the ON footswitch for over 5 seconds. The pedal will return to standard mode (the ON LED will stop glowing). All changes to the pedal's settings will be saved as soon as you exit Setup Mode and will be immediately applied.


Setup Mode: MIDI Setup Page (Bank switch CENTER)

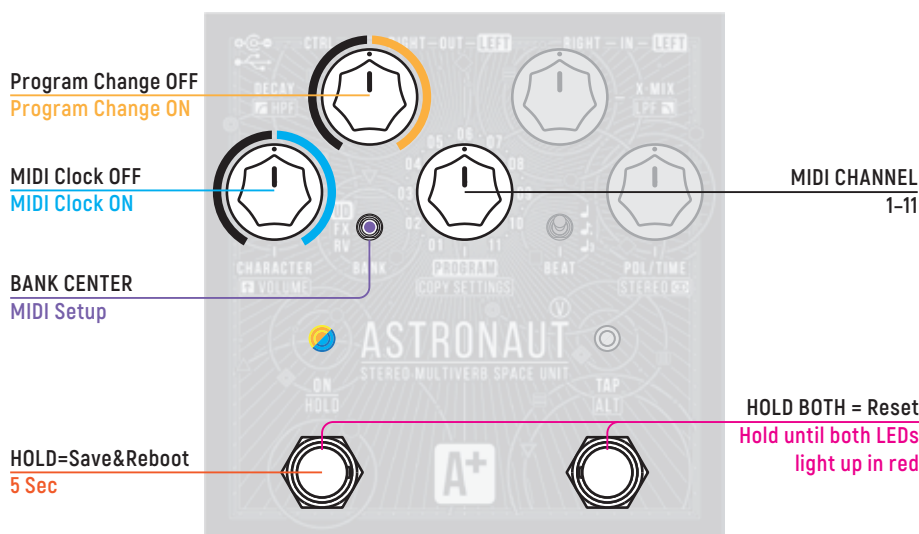

Exiting Setup Mode (Without Saving):

If you wish to exit Setup Mode without saving, unplug the power from the pedal, then plug it back in.

Setup Mode: Expression Setup Page (Bank switch DOWN)

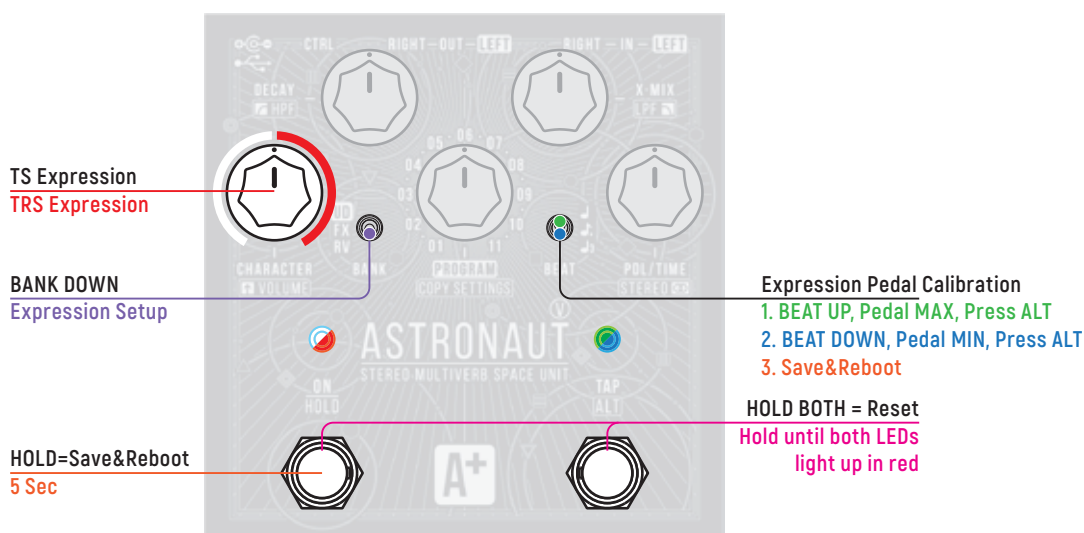

Factory Reset

Press and hold the ON/HOLD and TAP/ALT footswitches until both LEDs light up in red. As soon as the factory reset is finished, the pedal will return to standard mode (the ON LED doesn't glow). Don't disconnect the power supply from the pedal until factory reset is finished!

NB! The device's internal memory is formatted as part of the factory reset process. Make sure to save any config files or other data you wish to keep to another drive before starting the reset.