



PRISM II

STEREO FILTER·PAD

Cheat Sheet

For details, visit shift-line.com/prism2



ON+ MODE
TAP+MODE



ON LED:



BLUE BANK



RED BANK



MAGENTA BANK



CYAN BANK

Bank/Patch Select

Press and hold the ON or TAP footswitch while using the MODE switch to select a Bank.
Use the MODE switch to select a patch.



TAP+BEAT



TAP LED:



UP: TP (TAP)



CENTER: RS (RESET)



DOWN: EX (EXPRESSION)

Operation Mode

Selectable by the BEAT switch while holding down the TAP/ALT footswitch.



ON+BEAT



ON LED:



UP: NO TAILS



CENTER: TAILS



DOWN: KILL DRY

Bypass Type

Selectable by the BEAT switch while holding down the ON/HOLD footswitch.



TAP+ON

ON LED:

Favorite In order to store the current settings into the Favorite preset, press and hold TAP and ON simultaneously for 3 seconds. To recall or exit the Favorite preset, briefly press ON twice. If the ON LED is glowing green, the Favorite preset is active. If the Favorite preset is active but the pedal is bypassed, the ON LED lights up briefly. NOTE: when the Favorite preset is active, current knob and switch values aren't registered until changes are made.

Detune Mode: Press and hold the ON/HOLD footswitch for over 0.3 seconds to enter the gradual detune mode, which only affects the pitch shifting section.

Firmware updates and fine-tuning via MicroUSB. You can edit the prism2.set file in any text editor. If you experience any errors after editing the file, simply delete it, eject the Prism II drive from your computer, then turn the pedal's power off and on again. This will cause the default prism2.set file to be automatically recreated.

EXT.TAP Setup: External tap tempo/clock is configured in the prism2.set file. By default, the pedal is set to accept passive controllers and S-Triggers.

You can find a detailed description of all functions and features of the Prism II at
shift-line.com/prism2_black